



Quick guide for RS232 coding of Vivolink VLHDMICTL-MME

Function	Command
1 Set Trigger method	
System ON by HDMI	SYSONMETH1.
System OFF by HDMI	SYSOFFMETH1.
System ON by PIR	SYSONMETH0.
System OFF by PIR	SYSOFFMETH0.
System ON by PIR or HDMI	SYSONMETH2.
System OFF by PIR or HDMI	SYSOFFMETH0.

2 Set RS232 on/off codes for monitor/projector

ASCII code	
Power on command replace red text with ASCII	RS232ON/+3:123abc
Power off command replace red text with ASCII	RS232OFF/+3:123abc

HEX code	
Power on command replace red text with HEX code	RS232ON/-3:06 01 00 18 02 1D 0D 0A
Power off command replace red text with HEX code	RS232OFF/-3:06 01 00 18 01 1E 0D 0A

3 Set a delayed user defined RS232 code for monitor/projector

ASCII code	
Power on command replace red text with ASCII	RS232U/+3: 123abc
Power off command replace red text with ASCII	RS232U/+3: 123abc

HEX code	
Send user defined on command replace red text with HEX code	RS232U/-3:06 01 00 18 02 1D 0D 0A
Send user defined command replace red text with HEX code	RS232U/-3:06 01 00 18 01 1E 0D 0A

Set delay time (1 sec to 180 sec.) for user defined code (Example 3 sec.)	RS232DLY:003.
---------------------------------------------------------------------------	----------------------

4 Set HDMI +delay time for power off

Delay time min. 5 minutes (300 sec.)	NOSIGDLY:00300.
Delay time max. 180 minutes (10800 sec.)	NOSIGDLY:10800.
Check delay time power off	GNOSIGDLY.

S. S. KARMAKAR, K. K. DAS

On relay (Relay 1) 10sec to 180s	RELAY1COT:010.
Off relay (Relay 2) 10sec to 180s	RELAY2COT:010.
Check hold time of relay 1	GRELAY1COT.
Check hold time of relay 2	GRELAY2COT.

6 Set the HDMI video signal trigger condition.

Detects 5V signal (default)	5VORTMDS0.
Detects TMDS signal (video signal)	5VORTMDS1.
Check trigger status	G5VORTMDS.